

ONE YEAR LIMITED WARRANTY
(Valid in USA only)

HoMedics, Inc., guarantees this product free from defects in material and workmanship for a period of one year from the date of original purchase, except as noted below.

This HoMedics product warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; or any other conditions whatsoever that are beyond the control of HoMedics. This warranty is effective only if the product is purchased and operated in the USA. A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under warranty. HoMedics shall not be responsible for any type of incidental, consequential or special damages. All implied warranties, including but not limited to those implied warranties of fitness and merchantability, are limited in the total duration of one year from the original purchase date.

To obtain warranty service on your HoMedics product, either hand deliver or mail the unit and your dated sales receipt (as proof of purchase), postpaid, along with check or money order in the amount of \$10.00 payable to HoMedics, Inc. to cover handling.

Upon receipt, HoMedics will repair or replace, as appropriate, your product and return it to you, postpaid. If it is appropriate to replace your product, HoMedics will replace the product with the same product or a comparable product at HoMedics' option. Warranty is solely through HoMedics Service Center. Service of this product by anyone other than HoMedics Service Center voids warranty.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual state regulations, some of the above limitations and exclusions may not apply to you.

For more information regarding our product line in the USA, please visit: www.homedics.com

© 2004 HoMedics, Inc. and its affiliated companies, all rights reserved. HoMedics® is a registered trademark of HoMedics, Inc. and its affiliated companies. Color Cube™ and ColorMotion™ are trademarks of HoMedics Inc. and its affiliated companies. All rights reserved.

IB-LT500-A

Color Cube™ 500

 
ColorMotion™ Light



**Instruction Manual and
Warranty Information**

LT-500

1 year
limited warranty



Experience the Magic of ColorMotion

Thank you for purchasing Color Cube 500. This product is built with high-quality craftsmanship to provide you years of dependable service. We hope that you will find it to be the finest product of its kind.

Create excitement anywhere. Inside this box lies the magic of the color cube. It's fun. It's cool. And it's created for your enjoyment. Use it at a party, chill with it, study with it, boogie with it, sleep with it, decorate with it, meditate with it... use it with your friends or by yourself. It's in your hands from here... just enjoy it!

IMPORTANT SAFETY INSTRUCTIONS:

When using an electrical appliance, basic precautions should always be followed, including the following:

 
READ ALL INSTRUCTIONS BEFORE USING

DANGER - To reduce the risk of electric shock:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.

WARNING - To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.
- Close supervision is necessary when this appliance is used by or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by HoMedics; specifically any attachments not provided with the unit.
- Never operate this appliance if it has a damaged cord, plug, cable or



Caution: All servicing of this product must be performed by authorized HoMedics Service Personnel only.

housing. If it is not working properly, if it has been dropped or damaged, return it to HoMedics Service Center for examination and repair.

- Keep cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not carry this appliance by the supply cord or use cord as handle.
- To disconnect, remove plug from outlet.
- This appliance is designed for indoor use only. Do not use outdoors.

SAVE THESE INSTRUCTIONS

Caution – Please read all instructions carefully before operating.

- Never leave the appliance unattended, especially if children are present.
- Never cover the appliance when it is in operation.
- This unit should not be used by children without adult supervision.
- Always keep the cord away from high temperature and fire.
- To get the best effect, product must be placed on a flat surface.
- Do not lift, carry, hang, or pull the product by the power cord.
- If the adapter sustains damage, you must stop using this product immediately and contact the HoMedics Service Center for repair. (See the warranty section for the HoMedics address.)



The Color Cube Features

- 48 hip colors create a fascinating display
- 4 ever-changing color patterns
 - Lounge
 - Daydream
 - Doze
 - Party
- Adjustable speeds for color programs
- 10 glowing solid color settings
- “Pause” feature freezes the color pattern on your favorite design
- Built-in digital sound machine with 4 acoustic rhythms
- Music Mic allows colors to move to your music
- 15, 30, 60 minute auto-timer
- LED lighting for long life
- For table-top or wall-mount use (hardware provided)

Assembly

Unpack the product and check to make sure everything is included (Fig 1).

Table-top

Place the unit on a sturdy level surface.

Wall-Mount

1. Determine the location and height you are going to hang the unit.

NOTE: CHECK THE INTENDED WALL LOCATIONS FOR STRUCTURAL STRENGTH. INJURY TO PERSONS AND DAMAGE TO UNIT AND/OR MOUNTING SURFACE MAY RESULT IF UNIT IS PULLED FROM THE SURFACE. TO LIMIT THE LIKELIHOOD OF SUCH INJURY OR DAMAGE, MOUNT UNIT ON A STRUCTURAL WALL.
2. Using the position of the mounting holes on the back of the unit, mark the position on the wall where the two holes will be drilled.
3. Drill two holes that accommodate the anchors provided. You may use a 7/32 inch drill bit.
4. Insert the wall anchors into the two holes.
5. Insert the screws into the wall anchors and tighten with a screwdriver.
6. Place the unit on the wall.

Instructions for Use

1. Attach the A/C adapter jack to the base of the unit (Fig 1).
2. Plug the cord into a 120V household outlet.
3. Press the POWER button (Fig 2). A corresponding LED will illuminate to indicate the unit is on.

To use the solid colors

4. There are 10 solid colors from which to choose. Press the SOLID COLOR button (Fig 2) repeatedly until you find your favorite color. After 10 presses, the colors will repeat.

Figure 1



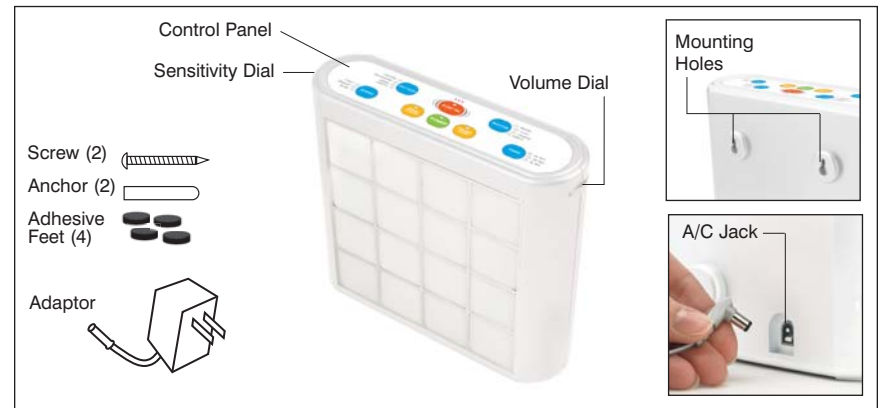 


Figure 2

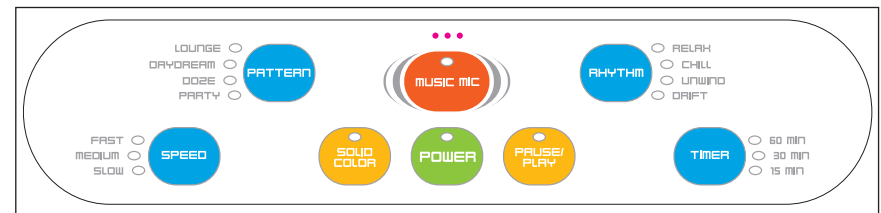 

 

5. To select an interactive pattern, press the PATTERN button (Fig 2). Pattern will automatically default to LOUNGE. Press the PATTERN button repeatedly to select from DAYDREAM, DOZE, PARTY, OFF and then back to LOUNGE. A corresponding LED will illuminate to indicate which program has been selected.
6. To pause on your favorite pattern, press the PAUSE/PLAY button (Fig 2) and the unit will capture and display that pattern. A corresponding LED will illuminate to indicate this feature is activated.
7. To resume the program, press the PAUSE/PLAY button again. The LED will turn off. You may also select the PATTERN or SOLID COLOR button to leave the pause.
8. To adjust the speed, press the SPEED button (Fig 2). Speed will automatically default to SLOW when used for first time. Press the SPEED button repeatedly to select from MEDIUM, FAST and back to SLOW. A corresponding LED will illuminate to indicate which program has been selected.
NOTE: When switching patterns, the speed of your choice will be retained until the power is turned off. Once turned off, it will default to SLOW speed for next use.

 
To use the Sounds

9. Press the RHYTHM button (Fig 2):
 - One time for RELAX
 - Two times for CHILL
 - Three times for UNWIND
 - Four times for DRIFT
 - A fifth time will turn the sounds off.
 A volume dial is located on the side of the unit (Fig 1). Turn the dial to select desired volume.

To use the Music Mic Feature

The Music Mic feature responds to music, voice or any other sound. The colors and speed of the unit will change in relation to the volume. It will react to the loudest source of sound.

- This product incorporates a dial to adjust the level of sound sensitivity.
 - For loud music, position along the lower range of the dial.
 - For soft to medium music, position along the medium to upper range of the dial.
- For optimal performance, place the unit at least 3 - 4 feet from the sound output source.



10. Press the MUSIC MIC button (Fig 2) and a corresponding LED will illuminate to indicate this feature is activated. Turn on music and watch the pattern change to the music. The pattern will also change to other external sounds such as people's voices.
11. Using sensitivity dial (Fig. 2): Turn the dial to increase or decrease the level of sensitivity of the microphone.
12. When you have finished using this feature, press the MUSIC MIC button again to turn off. Or, you may select another function by pressing PATTERN, SOLID COLOR or PAUSE/PLAY buttons. The LED light will turn off to indicate MUSIC MIC is deactivated.

To use the Auto-Timer

13. To set the auto-timer to turn off any of the features, press the TIMER button (Fig 2):
 - One time for 15 minutes
 - Two times for 30 minutes
 - Three times for 60 minutes
 - A fourth time will turn timer off.
 A corresponding LED will illuminate to indicate the time selected.
NOTE: When switching features, the time set will be retained until the power is turned off.
14. When finished using the Color Cube 500, press the POWER button to turn the unit off. The LED will no longer be illuminated.

Optimal performance is achieved in moderate to darker room settings. It is not recommended to position the Color Cube in direct facing light.

